



REVIT MANUAL


Duct heater

AH-KK



SUMMARISED REVIT BIM MANUAL SOLID AIR MODELS

SUMMARISED REVIT BIM MANUAL SOLID AIR MODELS

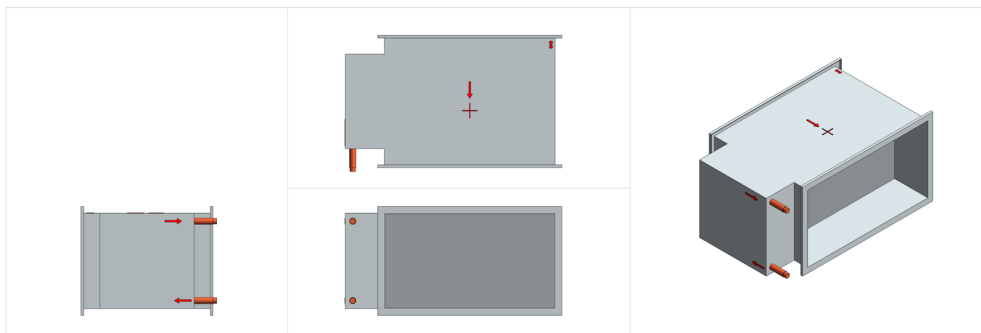

Text	
SACS_Warning_Text_Other	
SACS_Warning_Text_Size	
Dimensions	
NLRS_M_c01_breedte	450.0
SACS_Duct_Width	450.0
NLRS_M_c01_hoogte	250.0
SACS_Duct_Height	250.0
NLRS_P_c01_diameter	15.0
Size	450 x 250 - 450 x 250
Mechanical	
NLRS_P_c10_volumestroom	0.00 L/s
NLRS_P_c10_drukverlies_statisch	0.000000 Pa
Mechanical - Flow	
NLRS_M_c10_debiet	0.0000 m³/h
NLRS_M_c01_drukverlies_statisch	0.000000 Pa
SACS_Use_Manual_Airflow	☐
SACS_Manual_Airflow	0.0000 m³/h
Identity Data	
NLRS_C_model	AH2KKR-25-02 450 x 250
SACS_Article_Code	9401000537
SACS_Type_Mark	

Warnings when outcomes are outside the given threshold values.

Nominal width duct.

Corrected available width.

Nominal height duct.

Corrected available height.

Water-side connection size.

Water-side volume flow*.

Water-side pressure loss*.

Air flow.

Pressure loss with volume*.

Override calculated volume**.

Manual volume**.

Article name selected damper.

Order number.

Model Properties	
SACS_Water_Connection_Right	☒
Heater rows (2-10)	2
Heater circuits (1-26)	2
Visibility	
SACS_Disable_Warning	☐

Connection on the right.

Number of rows.

number of circuits.

Hide warning on model.

Notes

Because the number of applicable selection options is large, we made 4 separate families since the file size of a single family would become too big:

NLRS_57_DUA_UN_rectangular-heater-ahxkx1-7_LT_sacs, circuits 1 through 7

NLRS_57_DUA_UN_rectangular-heater-ahxkx8-14_LT_sacs, circuits 8 through 14

NLRS_57_DUA_UN_rectangular-heater-ahxkx15-22_LT_sacs, circuits 15 through 22

NLRS_57_DUA_UN_rectangular-heater-ahxkx23-26_LT_sacs, circuits 23 through 26

Although all four can show the full range, the item name and/or item number will only be available for the number of circuits in the family. The families are interchangeable with each other.

* The water-side volume flow, water-side pressure loss and air-side pressure loss must be entered manually on the basis of the selection made by Solid Air with SA-Select or by one of our advisers.

** You can use this to set the air volume manually. This may be useful when the post-heater in your model is used as end point and the rooms behind it are a typical.



Solid Air International

A. PO Box 14, 9610 AA Sappemeer

T. +31 598 36 12 21

E. contact@solid-air.nl

W. www.solid-air.com